


WE OFFER
PERFECT
MIXING
TECHNOLOGIES



PHARMACEUTICAL

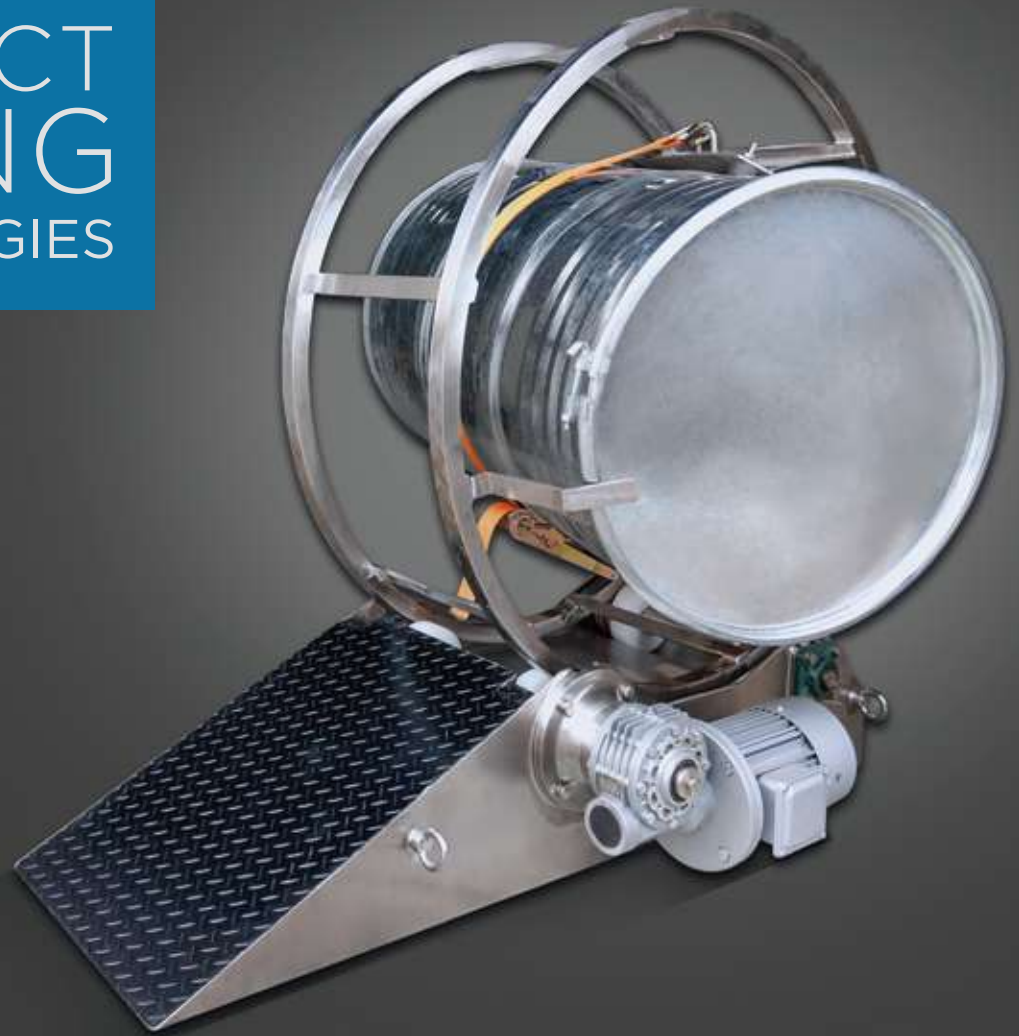

NUTRACEUTICAL



FOOD



CHEMICAL



BIO



HEALTH & BEAUTY

PDR DRUM HOOP MIXER

PDR DRUM HOOP MIXER



The PerMix PDR series Drum Hoop Mixer has been developed to meet increasing demands for a low batch mixer for mixing, blending, homogenizing, dyeing of dry powders and granules particularly in smaller industries or when frequent product changes as required.

PerMix Drum Hoop Mixers comprise a drive unit with roll-on / roll-off ramp, and it is used in mixing, homogenizing and dyeing of powdery or granulated components in the plastics industry, chemical industry, drug and dye works, food industry as well as textile and leather industry.

Drum capacity of PDR Mixer is usually 200L, but also available with 50 and 100 liters. Usually the drum is available as standard product in the market; however customized drums are also accepted, and the hoop then needs to be adapted to the drum size.

HOW IT WORKS

PerMix Drum Hoop Mixers consist of a motor / worm gearbox, and two shafts with 4 rollers located on the machine base with a ramp. A hoop is designed to hold the mixing drum which is fed with powdery or granulated materials. The mixing drum can be a standard drum with full volume varying from 50L to 200L, or a drum in customized shape/volume. The hoop will be adapted to hold the drum tightly by a belt with two hooks.

To perform the mixing duty, the hoop and drum assembly is rolled manually up along the ramp until finally located on the four rollers. The drive unit moves the shaft that is connected to it, and the two rollers on the shaft move the hoop / drum, and then the other shaft / 2 rollers will rotate.

The mixing drum is lying inside the hoop with an angle, thus the material inside will move not simply up and down but also left and right, which leads to a homogeneous mixing after several minutes.



APPLICATIONS

PerMix PDR series Drum Hoop Mixers are used widely in many applications, including but not only:

Food & Drinks

Breakfast Cereals, Enzymes, Flavours, Herbs, Minerals, Nutraceuticals, Seasonings, Spices, Tea Mixes, Tobacco, Vitamin Mixes.

Chemicals

Agrochemicals, Ceramic Powders, Detergents, Drugs, Dyestuffs, Leather Auxiliaries, Metal Powders, Pigments, Plastic Granules, Plastic Pellets, Plastic Powders, Textile Assistants.

Pharmaceuticals

Active Agents, Biological Solids, Carcinogenic Substances, Concentrated Active Ingredients, Generics, Intermediate Products, Sterile Products, Toxic Substances.

FEATURES & OPTIONS

Features of a PerMix PDR series Drum Mixer compared to a conventional mixer are:

- Intensive mixing with optional internal paddle baffles mounted in the drum.
- Well suitable for frequent product changes, as the storage container at the same time serves as a mixing container.
- Avoids inappropriate handling of dusty or tonic products.
- Hoop can be used for transporting drum.
- Easy exchanging of the mixing container.
- No need for drum hoists, cradles, etc.
- Easy cleaning of the mixing container.
- Optional GMP execution.



SPECIFICATIONS

Model	Total Volume, Liter	Operation Volume, Liter	Max. Loading Weight, kg	Power, kW	Speed of Drum Hoop, rpm	L mm	W mm	H mm	Weight kg
PDR-50	50	35	30	0.55	15	1350	670	1185	130
PDR-100	100	70	60	0.55	15	1350	670	1185	130
PDR-200	200	140	120	0.55	15	1350	670	1185	130

- All specifications are as accurate as is reasonably possible, but they are not binding.
- Length, width, height, weight are without the drum.
- Customized sizes are available against request.
- PerMix reserves the right to modify the design without notice.

PerMix Tec Co., Ltd.

Room 1-1214, No.1888,
N. Shengxin Rd, Jiading,
Shanghai, 201807, China

Tel: +86-133-9116-8218
Fax: +86-21-3375-8218

www.permixtec.com
www.permix-mixing.com

PerMix in China

Shanghai, 201821, China
Contact: Mr. Aaron Huang
Tel: +86 133 911 68218
Email: aaron.h@permixtec.com

PerMix in Israel

Adi 17940, Israel
Contact: Mr. Arie Srugo
Tel: +972-54-908-0144
Email: srugo@permixtec.com

PerMix North America

Chicago, Illinois,
60601, USA
Contact: Mr. John Paul
Tel: +1 630-649-1357
Email: John.paul@permixtec.com

South America office

Buenos Aires, Argentina
Contact: Mr. Gonzalo Villagra
Tel: +54-9-11-35374801
Email: gonzalo.villagra@permixtec.com

UK office

Scotland, UK
Contact: Mr. James Ryder
Tel: +44 (0) 7554139667
Email: james.ryder@permixtec.com

South Africa office

South Africa
Contact: Mr. Martin Whelan
Email: saf@permixtec.com

Russia office

Contact: Mr. Vladislav Dyuzhev
Tel: + 7 910 443 9924
Email: ru@permixtec.com

Ukraine office

Contact: Mr. Viacheslav Pishyi
Tel: +38 067 45 44 694
Email: ua@permixtec.com

